
 
 












IP Phone Keys & Features

No.	Item	Function
1		The 4 Soft Keys are used to select menu items and to control the LCD screen. Each key's function depends on the corresponding content displayed on the LCD.
2	Message Wait Light	The Message LED flashes when you receive a new voice mail message.
3		The OK/Checkmark (✓) on the Navigator Control key is used to confirm a setting for your IP phone, or the phone number you dialed.
4		The arrows (◀ ▶ ▲ ▼) on the Navigator Control key are used to scroll to items on the LCD screen.
5		The VOLUME CONTROL key is used to change the volume. - <i>When phone is idle</i> -- the Ringer volume can be adjusted. - <i>When talking</i> -- the volume for the Handset/Speaker/Headset can be adjusted.
6		The TRANSFER key is used to transfer a call to another extension or phone number.
		The REDIAL key is used to redial the last number you dialed.
		The HOLD key is used to place the current call on hold. Pressing the HOLD key again will return the caller to the original conversation.
		The MESSAGE key is used to access the Voice Mail system to retrieve your voice messages or record your greetings.
		The CONFERENCE key is used to establish a conference call between 2 or 3 people. - Pressing the Conference key will place the current call on hold and allow you to dial a 2nd number. - Pressing the Conference key again will return the caller to the original conversation.
7		The PHONEBOOK key is used to access phone numbers stored in you Phonebook. The LCD screen will prompt you to: 1) place a call to a previously stored number or, 2) edit your Phonebook entries.
		The SPEAKER key is used to activate/de-activate the handsfree dialing or talking feature.
8		The MUTE key is used to activate/de-activate the voice transmission from your IP phone.
9		The HEADSET key is used to activate/de-activate a Headset.




IP2007 Phone for Xcelerator IP Systems

Quick Reference Guide







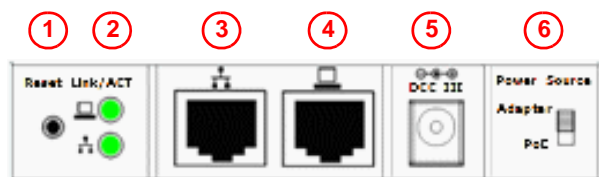










see back page for descriptions.

IP Phone Connections



No.	Item	Description
1	Reset	Button resets your IP phone to the factory default settings.
2	Link/ACT	LEDs indicate link/activity status of WAN and LAN ports.
3	IP Phone Port	RJ-45 Jack 100/10Mbps Ethernet port for connecting to the base unit.
4	LAN Port	<i>not used</i>
5	Power Jack	If a power source from an adaptor is required, use the standard power adaptor provided (5VDC/2000mA).
6	Power Source (optional)	This switch is only available on phone models supporting PoE. There are two available sources for power: - Power Adaptor - PoE (Power over Ethernet) Set to the appropriate option before installing your IP Phone. <i>Default setting</i> = Power Adaptor <i>NOTE:</i> Only the Ethernet WAN port supports PoE.

Basic Call Features

Function	Operation	
Making a call	   	<ol style="list-style-type: none"> Pick up the handset. You will hear a dial tone. Use the keypad to dial a phone number or extension. Hang up the handset to end the conversation.
Receiving a call	 	<ol style="list-style-type: none"> Pick up the handset when the phone rings. Hang up the handset to end the conversation.
Calling last number dialed	 	<ol style="list-style-type: none"> Pick up the handset. Press the REDIAL key. The last number dialed will automatically be redialed.
Transferring a call (blind transfer)	  	<ol style="list-style-type: none"> <i>During a conversation</i>, press the TRANSFER key. Use the keypad to dial the desired phone number. The call will transfer automatically; hang up the handset.
Adjusting voice volume	 	<p><i>During a conversation ...</i></p> <p>if the volume is too low or too high, press the VOLUME CONTROL key to adjust softness/loudness.</p>
Muting the microphone	 	<ol style="list-style-type: none"> <i>During a conversation</i>, press the MUTE key to prevent other party from hearing other discussions. Press the MUTE key again to re-establish a two-way conversation.